



# Model Rocket Safety Code

- 1. Materials.** I will use only lightweight, non-metal parts for the nose, body, and fins of my rocket.
- 2. Motors.** I will use only certified, commercially-made model rocket motors, and will not tamper with these motors or use them for any purposes except those recommended by the manufacturer.
- 3. Ignition System.** I will launch my rockets with an electrical launch system and electrical motor igniters. My launch system will have a safety interlock in series with the launch switch, and will use a launch switch that returns to the "off" position when released.
- 4. Misfires.** If my rocket does not launch when I press the button of my electrical launch system, I will remove the launcher's safety interlock or disconnect its battery, and will wait 60 seconds after the last launch attempt before allowing anyone to approach the rocket.
- 5. Launch Safety.** I will use a countdown before launch, and will ensure that everyone is paying attention and is a safe distance of at least 15 feet away when I launch rockets with D motors or smaller, and 30 feet when I launch larger rockets. If I am uncertain about the safety or stability of an untested rocket, I will check the stability before flight and will fly it only after warning spectators and clearing them away to a safe distance.
- 6. Launcher.** I will launch my rocket from a launch rod, tower, or rail that is pointed to within 30 degrees of the vertical to ensure that the rocket flies nearly straight up, and I will use a blast deflector to prevent the motor's exhaust from hitting the ground. To prevent accidental eye injury, I will place launchers so that the end of the launch rod is above eye level or will cap the end of the rod when it is not in use.
- 7. Size.** My model rocket will not weigh more than 1,500 grams (53 ounces) at liftoff and will not contain more than 125 grams (4.4 ounces) of propellant or 320 N-sec (71.9 pound-seconds) of total impulse. If my model rocket weighs more than one pound (453 grams) at liftoff or has more than four ounces (113 grams) of propellant, I will check and comply with Federal Aviation Administration regulations before flying.
- 8. Flight Safety.** I will not launch my rocket at targets, into clouds, or near airplanes, and will not put any flammable or explosive payload in my rocket.
- 9. Launch Site.** I will launch my rocket outdoors, in an open area at least as large as shown in the accompanying table, and in safe weather conditions with wind speeds no greater than 20 miles per hour. I will ensure that there is no dry grass close to the launch pad, and that the launch site does not present risk of grass fires.
- 10. Recovery System.** I will use a recovery system such as a streamer or parachute in my rocket so that it returns safely and undamaged and can be flown again, and I will use only flame-resistant or fireproof recovery system wadding in my rocket.
- 11. Recovery Safety.** I will not attempt to recover my rocket from power lines, tall trees, or other dangerous places.

## LAUNCH SITE DIMENSIONS

Installed Total Impulse (N-sec)	Equivalent Motor Type	Minimum Site Dimensions (ft.)
0.00 — 1.25	1/4A	50
1.26 — 2.50	A	100
2.51 — 5.00	B	200
5.01 — 10.00	C	400
10.01 — 20.00	D	500
20.01 — 40.00	E	1000
40.01 — 80.00	F	1000
80.01 — 160.00	G	1000
160.01 — 320.00	2 Gs	1500

# ARCON




**SEMI-SCALE  
MODEL  
SOUNDING  
ROCKET**

**SINGLE STAGE**

**EDUCATIONAL**

**PAYLOAD  
SECTION**

**FLYING MODEL  
ROCKET KIT**

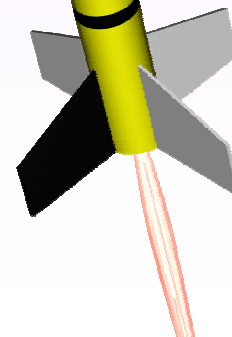

Made in the U.S.A by Semroc Astronautics Corporation - Knightdale, N.C. 27545

## ARCON Kit No. KV-7

Specifications		Engine	Approx. Altitude
Body Diameter	1.040" (2.6cm)	A8-3	225'
Length	20.0" (50.8cm)	B6-4	550'
Fin Span	4.8" (12.2cm)	C6-5	1100'
Net Weight	1.25 oz. (35.5g)		

**PARACHUTE RECOVERY**

## What is a @ ?

A @ is a retro reproduction of an out-of-production model rocket kit. It is a close approximation of a full scale model of an early historically significant model rocket kit from one of the many companies that pioneered the hobby over the past half century. A @ is not a true clone or identical copy of the original. It incorporates improvements using modern technology, while keeping the flavor and build appeal of the early kits.

---

## About Centuri Engineering Company

Centuri Engineering Company was started in 1961 by Leroy (Lee) Piester in his garage while he was still in college in Phoenix, Arizona. With his wife, Betty, they built Centuri into one of the largest model rocket companies ever.

Centuri was known for its unusual and innovative designs, producing over 140 different kits with something for every model rocketeer. They also produced model rocket engines and pioneered the modern composite high powered engines with their Enerjet line.

Centuri Engineering was sold to Damon in the late 1960's and shared the same parent corporation with Estes Industries, the largest model rocket company in the world. The Centuri product line was kept separate from the Estes line until 1983. A few of the old kits have been reissued by Estes since then, but for the most part, Centuri Engineering Company lives today only in the dreams of the senior members of the model rocket community.

---

May 2, 2004

Copyright © 2004 Semroc Astronautics Corporation  
Box 1271 Knightdale, NC 27545 (919) 266-1977

## LIMITATION OF LIABILITY

Model rockets are not toys, but are functional rockets made of lightweight materials and are launched with NAR or Tripoli safety certified model rocket motors, electrically ignited and flown in accordance with the NAR Model Rocket Safety Code. If misused, model rockets can cause serious injury and property damage. Semroc certifies that it has exercised reasonable diligence in the design and manufacture of its products. Semroc cannot assume any liability for the storage, transportation, or usage of its products. Semroc shall not be held responsible for any personal injury or property damage whatsoever arising out of the handling, storage, use, or misuse of our products. The buyer assumes all risks and liabilities therefrom and accepts and uses Semroc products on these conditions.

Your purchase and use of any Semroc products is construed as your agreement to and acceptance of these terms. If you do not agree to these terms and conditions, you must return the product, unused, for refund or credit.

## 100% SATISFACTION GUARANTEE

If you are not 100% satisfied with your Semroc product, we will make it right by providing whatever you consider fair, from refund to replacement.

Contact us at:

**Semroc Astronautics Corporation**

Customer Service Department  
P.O. Box 1271  
Knightdale, North Carolina 27545


## JOIN THE NAR!

Sign up online at [www.nar.org](http://www.nar.org) to join the premier model rocketry organization. Semroc fully supports the National Association of Rocketry and recognizes it as the sport's official voice. The NAR is the oldest and largest sport rocketry organization in the world. Since 1957 over 80,000 serious sport rocket modelers have joined the NAR to take advantage of the fun and excitement of organized rocketry. It is always more fun if you fly with friends. The *Sport Rocketry* magazine is one of the best ways to keep informed of new developments in the hobby. Check online at [www.semroc.com/nar](http://www.semroc.com/nar) for promotions just for NAR members.




# FLIGHT PREPPING

- ❑ **26.** Mounting the engine: Insert the engine and make sure the engine hook keeps the engine in snugly. The hook may be slightly bent to make sure the engine is retained.

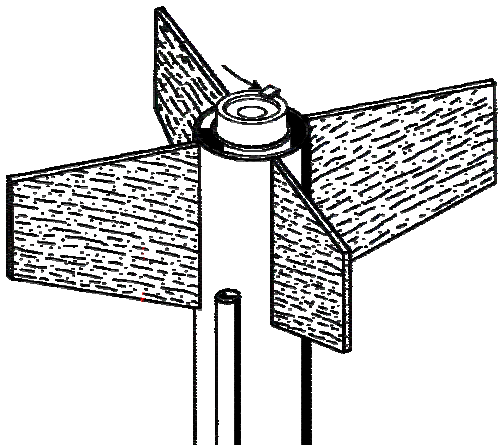

- ❑ **27.** Pack the recovery wadding from the top of the body tube. Use a sufficient quantity to protect the parachute, but not too much that it will interfere with the proper deployment of the parachute.

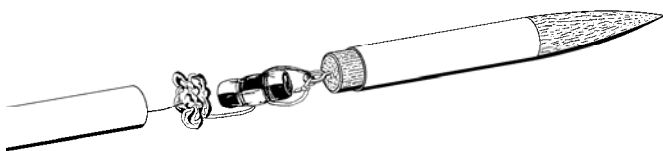

- ❑ **28.** Fold the parachute and pack it and the shock cord on top of the recovery wadding. Slide the payload section into place, making sure it does not pinch the shock cord or parachute.

- ❑ **29.** Refer to the model rocket engine manufacturer's instructions to complete the engine prepping. Different engines have different igniters and methods of hooking them up to the launch controllers.

- ❑ **30.** Carefully check all parts of your rocket before each flight as a part of your pre-flight checklist. Launch the Arcon from a 1/8" diameter by 36" long launch rod.

## About the Arcon™

The Centuri Arcon was first released in the 1962 Catalog as a 1/8 scale model. This early version used the ST-7 body tube and was 16" tall. This model was the Centuri #KB-2 with a price of \$1.50 and was sold from 1962 through 1964. In 1965, the Arcon was changed to a 1/6 scale model based on the ST-10 body tube and was released as Centuri #KC-1 at a price of \$2.25. This @ kit is based on the later version. In 1971, the balsa nose cone was changed to plastic and the same year the Arcon was discontinued. The Arcon was a popular entry-level semi-scale model.

The @ Arcon is updated with precision laser-cut fins. The dimensions of the KC-1 version are maintained with a balsa nose cone. The original rubber shock cord is replaced with an elastic cord for longer life. The original method of attaching the shock cord has been replaced by a Kevlar® cord for greater reliability. An engine hook is also added for ease of changing the engine.

## BEFORE YOU START!

Make sure you have all the parts included in this kit that are listed in the Parts List in the center of these instructions. In addition to the parts included in this kit, you will also need the tools and materials listed below. Read the entire instructions before beginning to assemble your rocket. When you are thoroughly familiar with these instructions, begin construction. Read each step and study the accompanying drawings. Check off each step as it is completed. In each step, test-fit the parts together before applying any glue. It is sometimes necessary to sand lightly or build-up some parts to obtain a precision fit. If you are uncertain of the location of some parts, refer to the exploded view in the center of these instructions. It is important that you always ensure that you have adequate glue joints.

**TOOLS:** In addition to the parts supplied, you will need the following tools to assemble and finish this kit.




# ASSEMBLY


❑ **1.** These instructions are presented in a logical order to help you put your Arcon together quickly and efficiently. Check off each step as you complete it and we hope you enjoy putting this kit together and flying it.

## ENGINE MOUNT ASSEMBLY

❑ **2.** Tie a loop in one end of the yellow Kevlar® cord. Insert one end of the engine hook through the loop and into the pre-punched engine tube. Glue the thrust ring in place on top of the engine hook as shown.

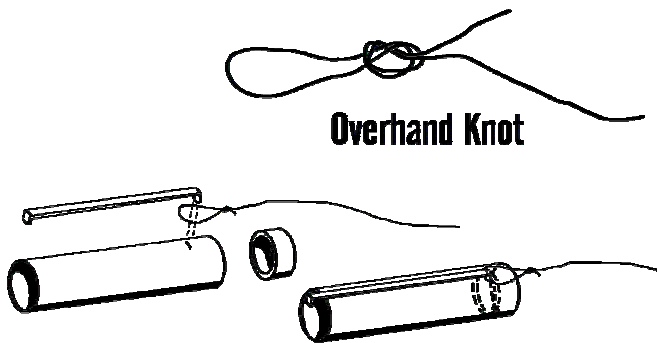


❑ **3.** Glue the two centering rings on the engine mount tube as follows. Slide the first ring from the bottom until it is even with the end of the engine hook. Make sure the yellow Kevlar® cord is free and comes out from the top of the tube as shown below. Mark 1" from the bottom of the engine mount tube and slide the other centering ring from the bottom until it is even with the mark.

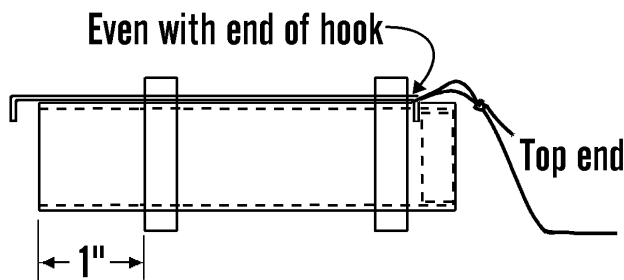


❑ **4.** When the centering rings are positioned properly, apply glue fillets around the engine mount tube at all four joints as shown.

❑ **24.** Spray painting your model with a fast-drying enamel will produce the best results. PATIENCE...is the most important ingredient. Use several thin coats, allowing each coat to completely dry before the next coat. Start each spray a few inches above the model and end a few inches below the model. Keep the can about 12" away and use quick light coats. The final coat can be a little heavier to give the model a glossy wet-looking finish. Use rolled newspaper to hold the rocket while you spray it.

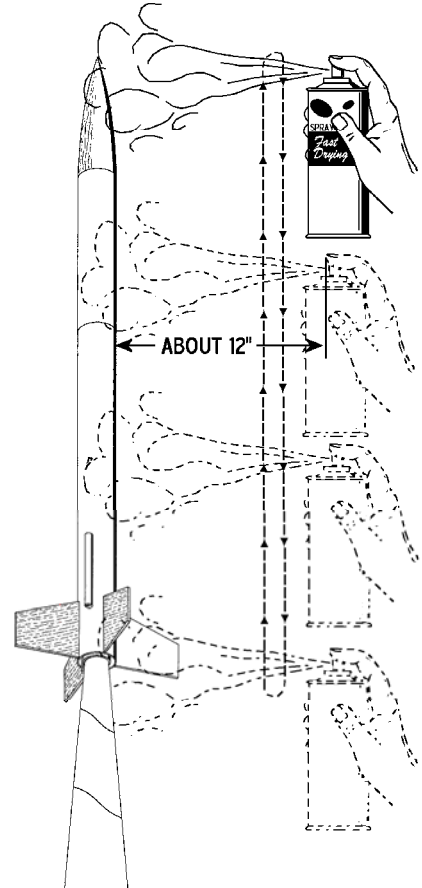


❑ **25.** After the paint has dried, decals should be applied. The decals supplied with the Arcon are waterslide decals. Each decal should be cut separately from the sheet. Completely apply one of the decals before starting the next. Think about where you want to apply each decal and check for fit before wetting the decal. Make sure the ends are aligned with the roll pattern.

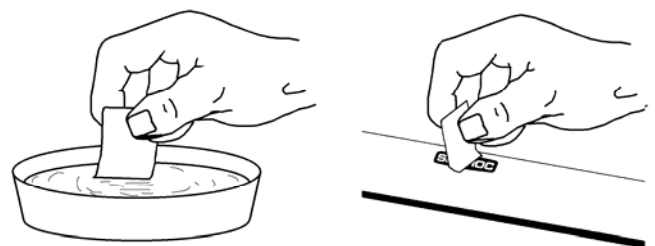



- ❑ **21.** Tie the loose end of the elastic cord to the screw eye. Put a drop of glue on the knot to keep it from untying.

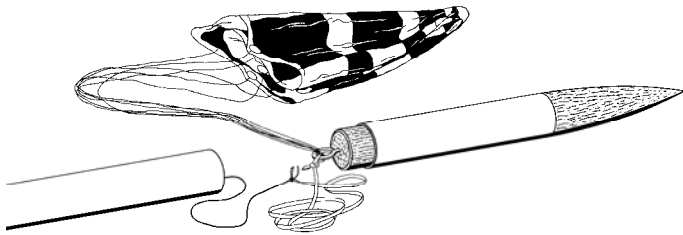


This completes the assembly of your

# ARCON

## FINISHING

- ❑ **22.** When the fillets have dried, prepare balsa surfaces for a smooth professional looking finish. Fill the wood grain with balsa fillercoat or sanding sealer. When dry, sand with fine sandpaper. Repeat until smooth.

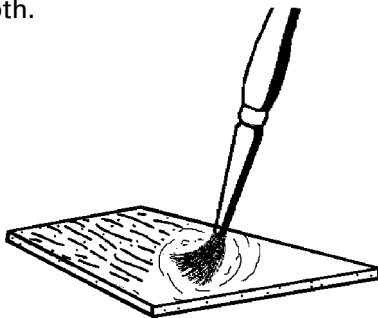

1st coat of fillercoat



2nd coat of fillercoat



After 1st sanding




3rd coat of fillercoat




After final sanding

- ❑ **23.** After all balsa surfaces have been prepared, wipe off all balsa dust with a dry cloth. First spray the model with an enamel primer. Choose a high visibility color combination like yellow and black for the final color.

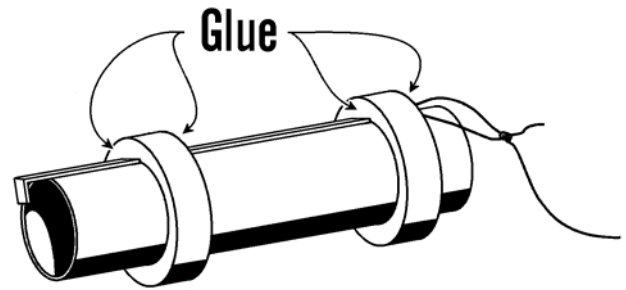


- ❑ **5.** Pull the yellow Kevlar® cord back through the engine mount tube so it will be out of the way later when it is installed in the main body tube. Set the engine mount aside to dry completely.

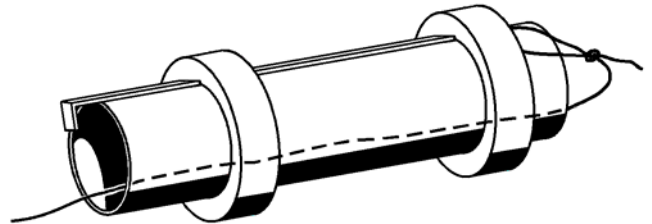

## FIN PREPARATION


- ❑ **6.** Lightly sand each side of the laser-cut fins. Carefully push the laser-cut fins from their sheet. Start at one point on each fin and slowly and gently work around the fin.

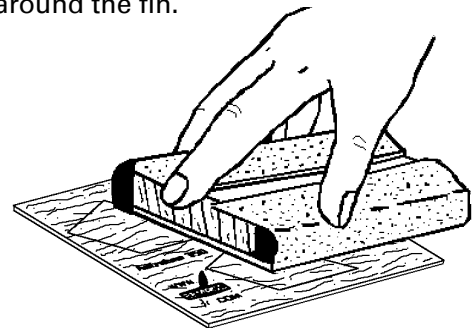


- ❑ **7.** Stack all the fins together. Line them up squarely and sand the fins back and forth over some fine sandpaper to get rid of the hold-in tabs as shown below.



- ❑ **8.** Round all edges except the root edges (which will be glued to the body tube). The tip edges and trailing edges may be tapered for better aerodynamic cross section.


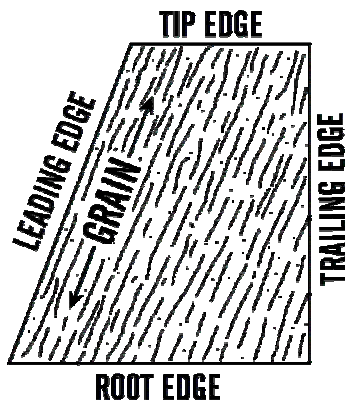


- ❑ **9.** Stand the largest body tube on the fin guide below and make the fin position marks on the sides of the tube. Find a convenient channel or groove such as a partially open drawer, a door jamb (as shown,) or a piece of molding. Using the channel, extend the marks the full length of the tube to provide lines for aligning the fins.

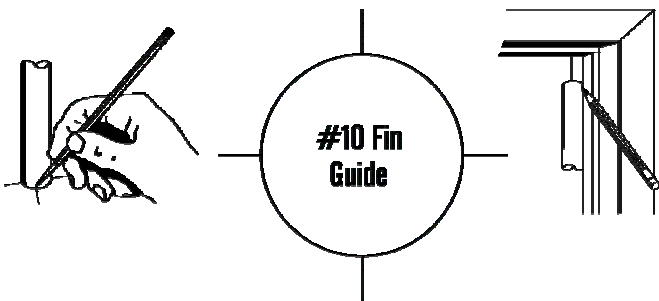

## SHOCK CORD


- ❑ **10.** Check the engine mount for fit in the body tube. If it has rough edges or excessive glue, sand lightly until it fits into the body tube. Apply a heavy bead around the inside of the body tube. Then quickly and smoothly push the motor mount into the tube until the engine mount tube is even with the bottom of the body tube.

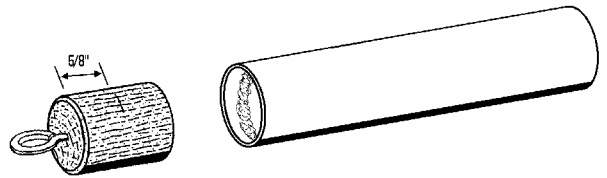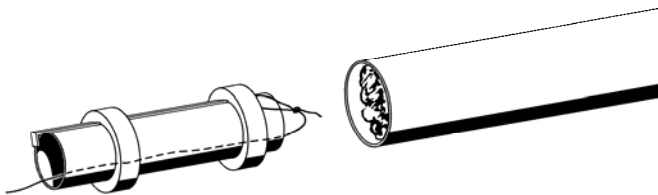

- ❑ **18.** Slide the nose block, with screw eye pointing out, into the body tube until the mark is even with the end of the body tube. Do not stop until the nose block is in place or the glue may set prematurely.




- ❑ **19.** Insert the nose cone in the body tube and check for proper fit. The nose cone should be snug to hold itself in alignment. If it is too loose, add masking tape. If it is too tight, sand the shoulder slightly. Do not glue the nose cone so you can access the payload area.

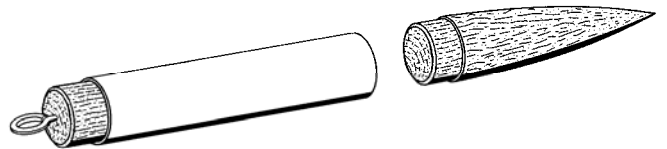


## FINAL ASSEMBLY


- ❑ **20.** Assemble chute using instructions printed on canopy. Attach chute by passing the lines through the screw eye and looping them over the tip of the nose cone and payload tube as shown. Pull the lines tight and make sure they are all of equal length. Put a drop of glue on the joint to keep the lines from moving.

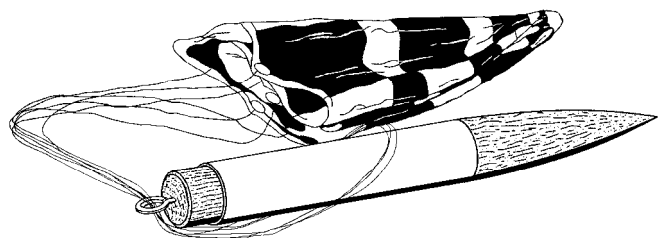

- ❑ **14.** After the fin assembly is completely dry, run a small bead of glue along both sides of each fin-body tube joint. Using your index finger, smooth the glue into fillets.

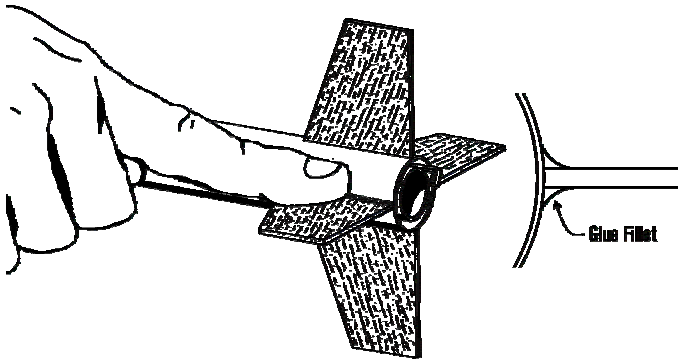


- ❑ **15.** Glue the launch lug along the side of the body tube, centered between two of the fins and about 1" from the bottom of the body tube.

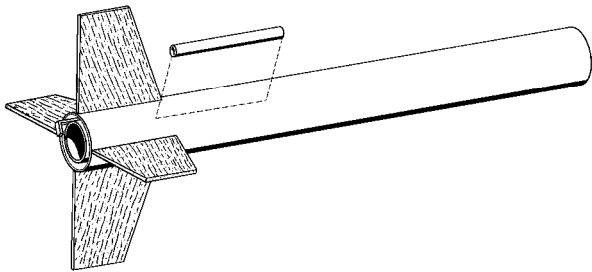


## PAYLOAD SECTION

- ❑ **16.** Turn the screw eye into the center of the base of the nose block. Unscrew it and squirt glue into the hole. Reinstall the screw eye and wipe off any excess glue.

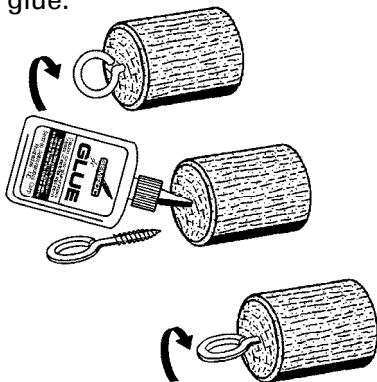


- ❑ **17.** Check the nose block for fit in the payload tube. It may be necessary to sand it gently if the fit is too tight or build it up with masking tape if too loose. Mark the nose block 5/8" from one end. Apply glue to the inside the remaining body tube at a distance of 1/4" from one end.

- ❑ **11.** Prepare the shock cord as follows. Line up one end of the elastic shock cord with the free end of the Kevlar® cord and tie an overhand knot at the end of the two cords. Pull the knot tight and place a small drop of white glue on the knot to prevent it from loosening.

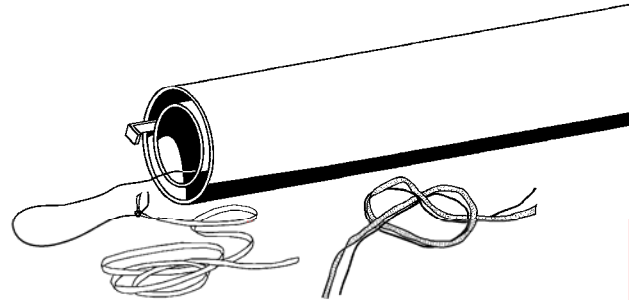


- ❑ **12.** Feed the shock cord and yellow Kevlar® cord back through the engine mount tube and body tube until they come out the opposite end. Make sure they are pulled all the way through the engine mount and do not hang on the engine hook. It may be necessary to shake the tube or pull the shock cord through with a coat hanger or small, thin wood dowel.

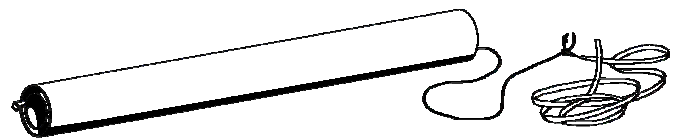

## FINISH FINS

- ❑ **13.** Run a thin bead of glue along the root edge of one of the fins. Attach it to the body tube on one of the lines drawn earlier. Remove the fin and wait a few minutes until the glue gets tacky. Reapply the fin and check for proper alignment. Repeat for the other three fins. Refer to the end view.

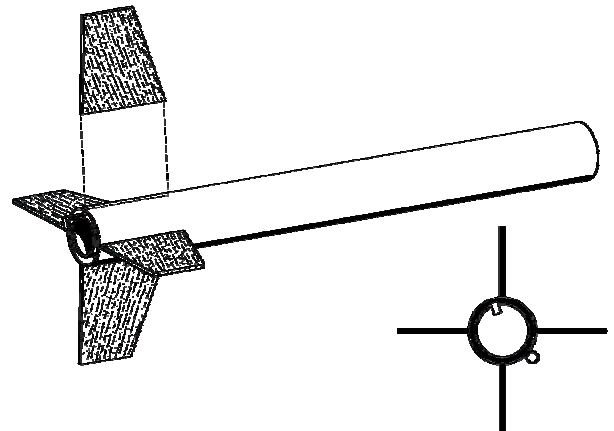

## Parts List

A	1	Body Tube .....	ST-10105
B	1	Body Tube.....	ST-1050
C	1	Body Tube.....	ST-730E
D	1	Balsa Nose Cone.....	BC-1045
E	1	Laser Cut Fins.....	FV-7
F	1	Balsa Tube Coupler .....	BTC-10
G	2	Centering Rings .....	CR-710
H	1	Thrust Ring.....	TR-7
I	1	Launch Lug .....	LL-122
J	1	Engine Hook .....	EH-28
K	1	Screw Eye.....	SE-10
L	1	Elastic Cord .....	EC-124
M	1	Kevlar Thread.....	SCK-24
N	1	Plastic Parachute.....	RC-12
O	1	Tape Discs .....	TD-6
P	1	Shroud Line .....	SLT-6
Q	1	Decal .....	DKV-7

## EXPLODED VIEW

